
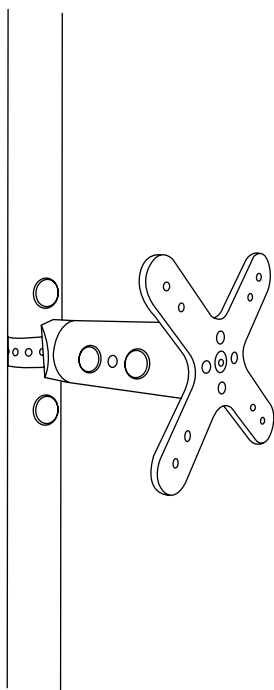


**Installation:** The Monitor Arm will quickly fit into your Varia.Sophora frame. First snap the **A60/AHUB** connector into the center pole of the frame. This will replace an **AHUB** from the standard configuration. Next snap the **S10** into place so that it's pointing forward. Last the **VESA Bracket** snaps into place.

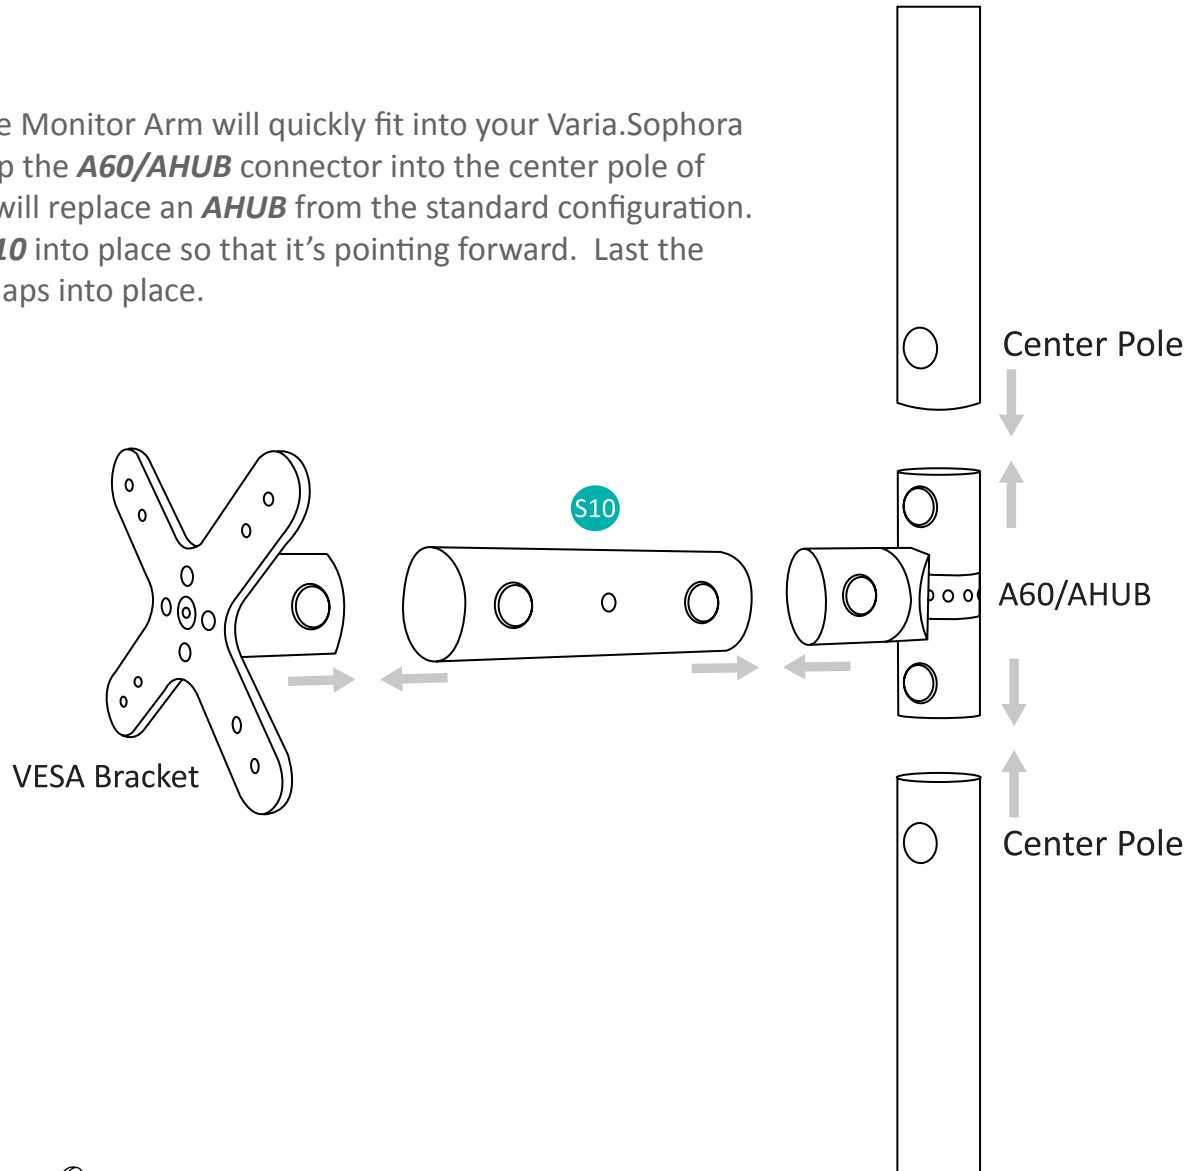

**Notes:** You will want to remove the **S10** and **VESA Bracket** before putting on or removing your graphic. It is easier to fasten the **VESA Bracket** to the back of your monitor before snapping it onto the frame.